




3. The final shape of the head can be adjusted slightly by inserting further into, or out of, the slots. Sections may require straightening once all have been fitted.

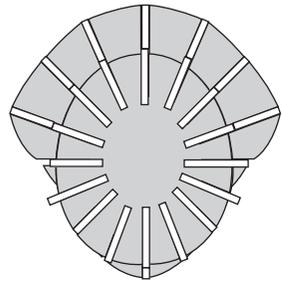

Viewed from above

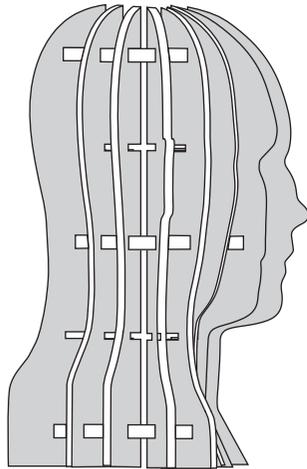

From side

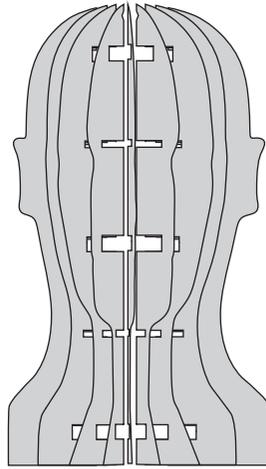

From front

Archival Foam Hat/Wig mount Instructions




170-NRM4BK
170-NRM4BLA
170-NRM4WT
170-NRM4WHI

A video guide is also available scan here to go to the web page >




Parts

**Note: Each vertical part is has 'V' cuts to indicate part number. E.g Part 3
The front section, part 0, has no 'V' cuts, section 8, has 8 cuts.**

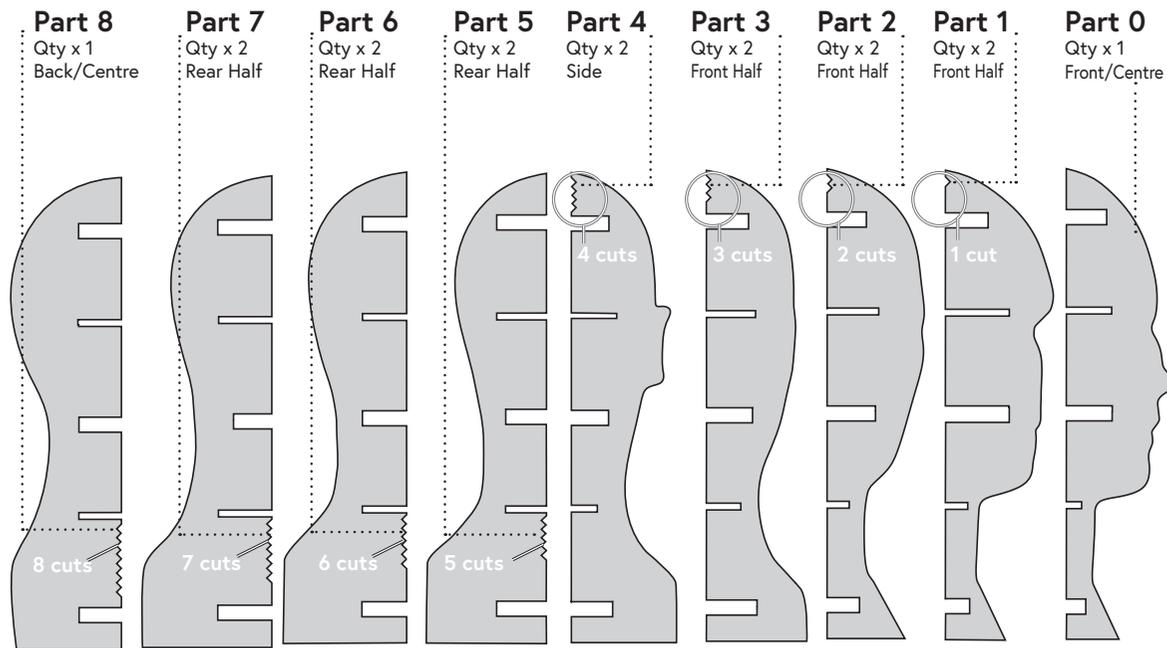

Horizontal Sections - Qty 1 of each

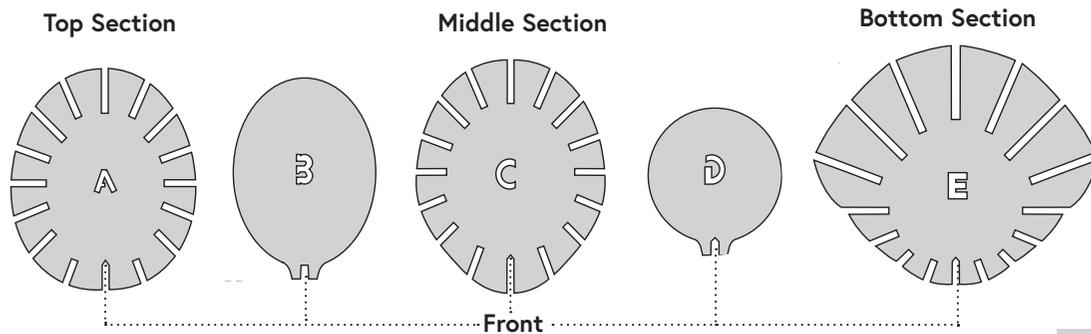



Front centre in each horizontal section is indicated by point cut like this.
The reference letter for each part is cut into the foam.



Steps

1. Insert vertical 'Part 0' (front centre profile with nose) firmly into the front centre slot on each of the horizontal sections (A/B/C/D/E). The front centre slot of each horizontal section has a chevron/point cut for identification.

Note: Sections B & D do not have slots and are pushed into the corresponding slot on the vertical sections. These will require a little adjustment as you work your way around.

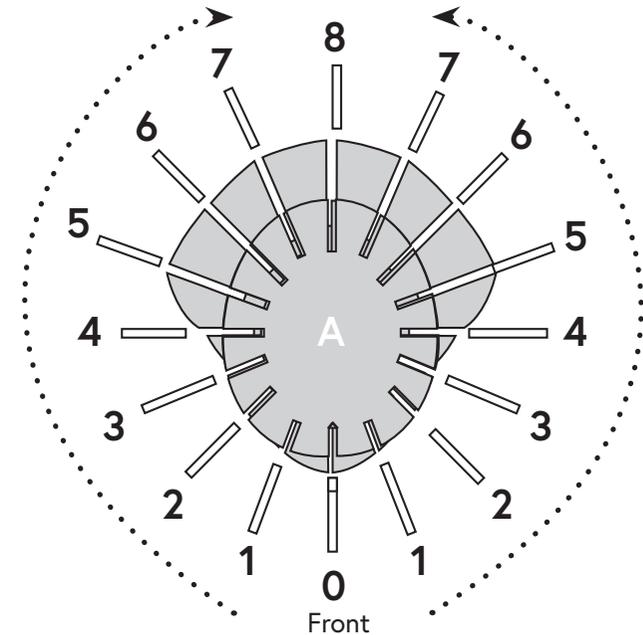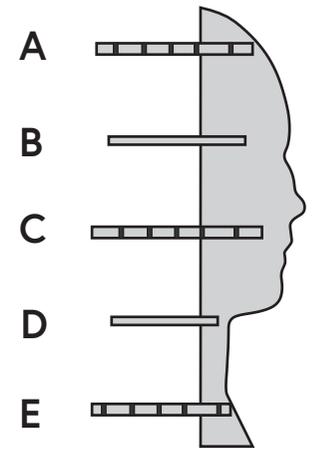

Work from front to back, each side

2. Working from front to back, on each side, insert the next vertical sections (Parts '1') into the next slots in the horizontal sections. Continue to insert, parts 2, 3, 4, 5, 6, 7 and finally the centre back section part 8. Sections may require straightening.